




LONGWILL YC300 Semi Auto Cart Filler Operation Manual

1. Plugin power cable line, turn on the machine.

Click “reset” on the touch screen.

When it shows “finish”, then Click “finish.”




Click “Auto” go into working page.

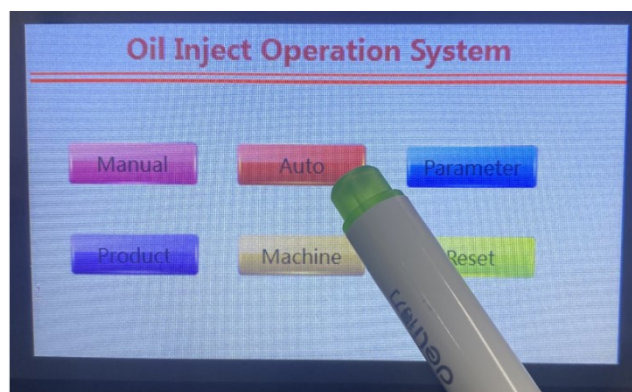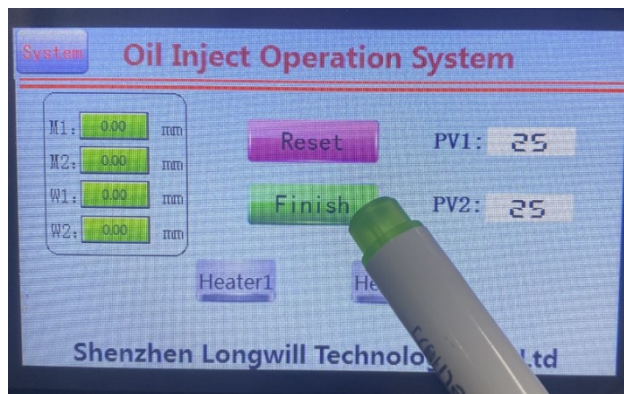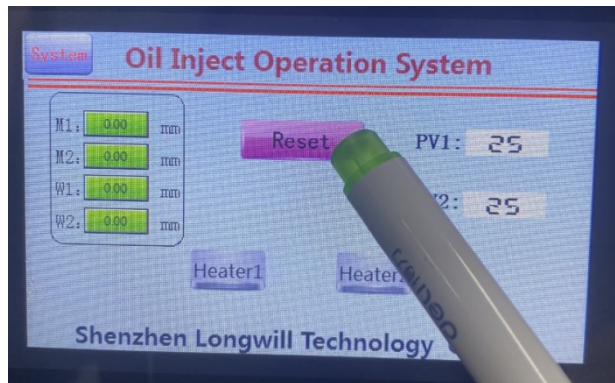


2. How to clean machine (Clean with alcohol when 1st use or after filling)?

Pour alcohol into oil tank, Set filling volume at 7ml, click “one” change to be “more.” Click “start”;


After 5 times filling, click “more” it will change to “One”, it will stop cleaning

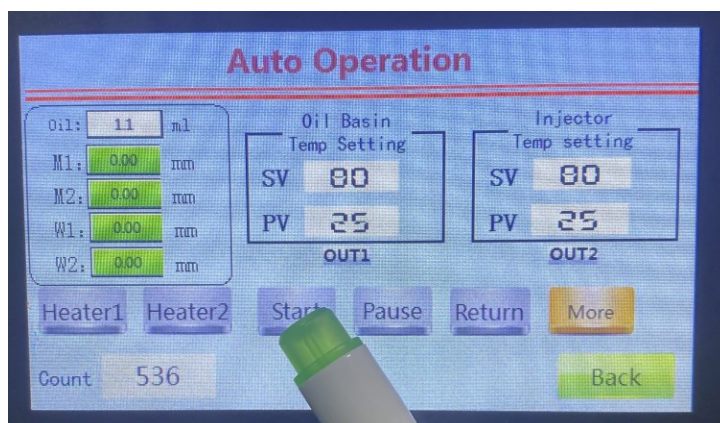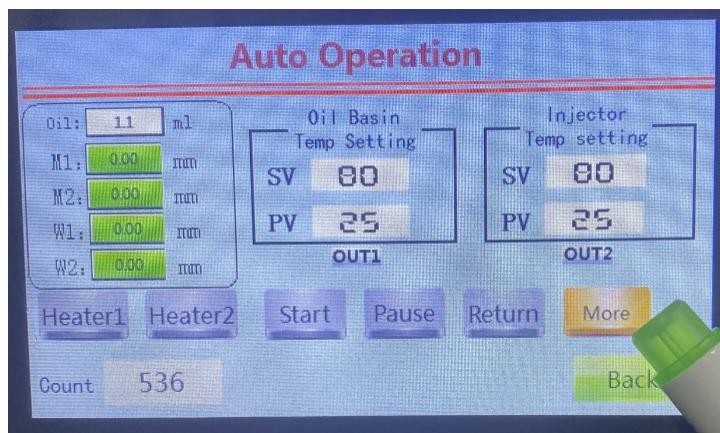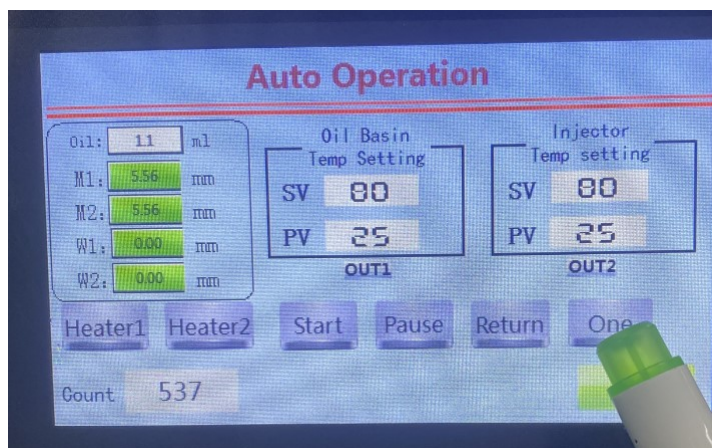



3. After clean air, pour oil into oil tank. Set temp needed, then Click "heater1" "heater2" to heating.

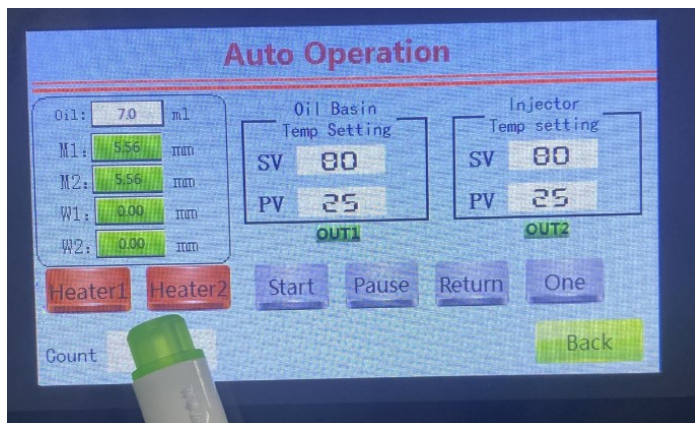

4. After temperature reach the setting temp, let's start fill.
Set filling volume according to your devices.
You could use plugin tray or food pedal to dispense oil.
Remember to fill 5-7drops into a container, as it may have air inside and not precise in the first few drops. Then fill into disposable devices directly

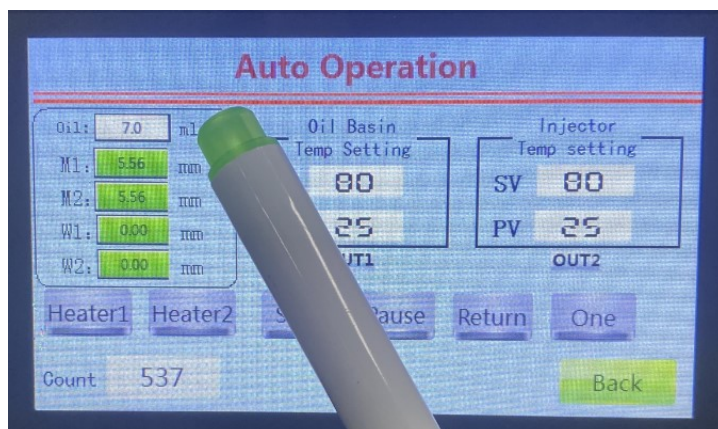

5. If you want machine fill automatically, can Click “one” transfer to be “more”, then click “start” it will continuously output. No need press pedal nor filling tray button.

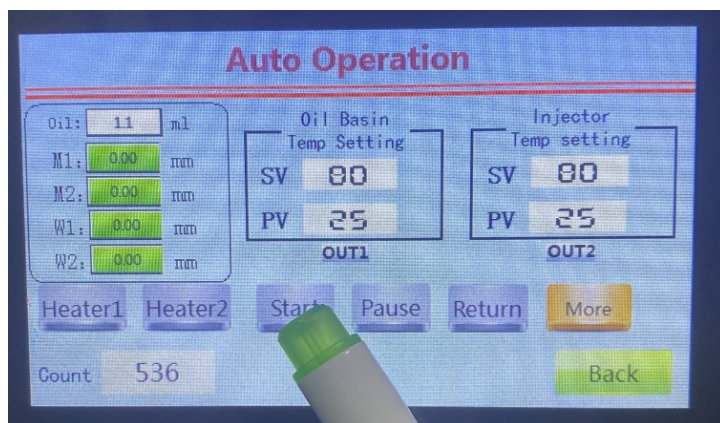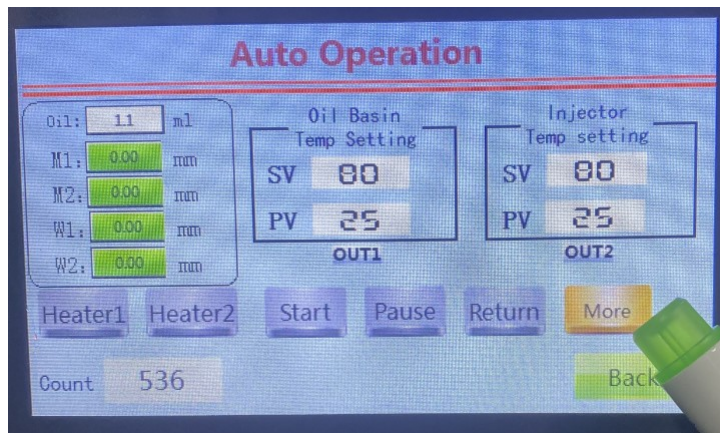

6. After finish filling work, and clean tank again with alcohol, same procedure as Step 2, to make sure no oil clog and machine working great next time.